

HEPA Air Filtration Equipment

Air Scrubbers for Mold, Asbestos and Lead Abatement Industry

MiniForce II - compact, light weight machine, 2-speeds: 350 and 425 cfm. Weight: 40 lbs. Size: 14"Hx14"Wx26.5"L **Accessories:** Activated carbon filter for toxic fumes and odors.

OmniAire 600V - compact, variable speed control, 150 - 600 cfm. Weight: 55 lbs. Size: 16"Hx14"Wx30.5"L **Accessories:** Activated carbon filter for toxic fumes and odors; UV-C Germicidal Light for viruses, bacteria, mold and odors.



OmniAire 1000V - compact, versatile, variable speed control, 300 - 950 cfm. Weight: 75 lbs. Size: 21"Hx18"Wx32"L **Accessories:** Activated carbon filter for toxic fumes and odors.


OmniAire 1300V - narrow profile housing, variable speed control, 300 - 1250 cfm. Weight: 90 lbs. Size: 29"Hx14"Wx33"L **Accessories:** Activated carbon filter for toxic fumes and odors.

OmniAire 2000 and 2000V - 2-speed, 1000 and 1900 cfm or variable speed control, 300 - 1900 cfm. Weight: 110 lbs. Size: 30"Hx20"Wx33"L **Accessories:** Activated carbon filter for toxic fumes and odors; UV-C Germicidal Light for viruses, bacteria, mold and odors.

OmniAire 2200 - 2-speed, 1000 and 2000 cfm. Weight: 125 lbs. Size: 31"Hx26"Wx32"L. **Accessories:** Activated carbon filter.

OmniForce II - compact and modular, variable speed control, 300 - 1900 cfm. Weight: 95 lbs. Size: 27"Hx18"Wx32"L with filter attached. **Accessories:** Activated carbon filter for toxic fumes and odors.

 **CAUTION** 

Do not use in hazardous atmosphere.
Do not use to exhaust combustible or explosive gases.
Do not expose to water or rain.
Connect only to grounded outlet with GFCI device. 

Disconnect power for cleaning and servicing.

425-774-3257
2125 196th Street SW, Suite 115, Lynnwood, WA 98036
www.omnitedesign.com



OmniAire 1200V



OMNIAIRE 1200V HEPA Air Filtration system is designed for removal of toxic mold, asbestos and lead abatement projects and any applications where HEPA filtration is required.

Omnitec Design, Inc.

2125 196th Street SW, Suite 115, Lynnwood, WA 98036


www.omnitedesign.com

SPECIFICATIONS

Motor: ¾ hp, 115 VAC/6.0 amps, thermal protected
Controls: Variable Speed Controller, vacuum gauge 0-3” W.C., speed selector switch
Blower: Airflow with HEPA Filter, 150 - 1100 cfm.
Final Filter: HEPA 99.97% @ 0.3 micron., particle board frame, 16”x16”x11.5”
Pre-filter: 2-stage poly pad, 35% efficiency, 18”x18”x2”
Housing: Aluminum/Galvanized Steel/Epoxy Powder Paint, size 38”Hx25”Wx25”L
Weight: 105 lbs.

ORDERING INFO PART #

OmniAire 1200VOA1200V
HEPA Filter 99.97%, wood frame, 0.3µOAH1616
HEPA Filter 99.99%, metal frame, 0.3µOAH1616G
Primary/Secondary Filter (qty 20)①OAP1818
Intake Manifold, 10”②OAIM1200P
Quick Clamp, 10”③QCW12
Flexible Duct, 10”x25’OAD10
OdorGuard 600 Carbon Filter, 16x16x2④OG1616
UV-C Germicidal Light ModuleUVCM1200

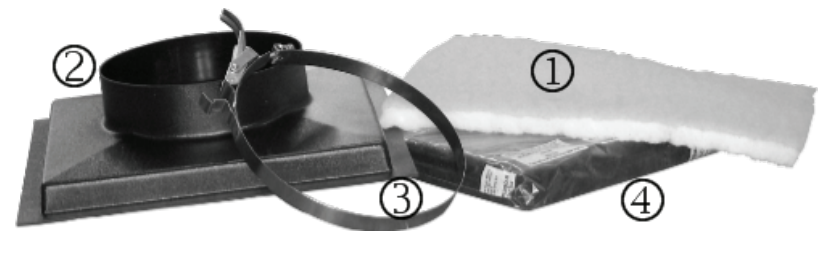

OPERATING INSTRUCTIONS

Unpacking; Check unit for damage. Remove the primary/secondary filter and check the HEPA filter to be sure that it is seated well against the internal flange and the bottom of the unit and the holding tabs are tight.

Operation: The machine must be operated with HEPA filter in place. Also, it is recommended to use the primary/secondary filter and replace it frequently to extend the life of the HEPA.

Start and speed of the machine is controlled by HIGH/SPEED CONTROL switch and SPEED CONTROLLER knob.

To start and operate the machine in highest speed, flip the toggle switch to HIGH position and the machine will start at full speed. To start and operate in reduced speed, flip the toggle switch to SPEED CONTROL position and turn the SPEED CONTROLLER knob to desired speed. Speed can be switched between HIGH and selected controlled speed by HIGH/SPEED CONTROL switch at any time.

To check on the HEPA filter loading, switch to HIGH SPEED. When filters are clean, the pressure gauge will indicate about 1.8” W.C. of vacuum. As the filters fill with dust, **the efficiency of the filters are maintained**, but the air flow will decrease and the vacuum reading will increase. Change the primary/secondary filter frequently to protect the HEPA and to get more air flow. When vacuum reaches about 2.8” W.C. with a clean pre-filter, the air flow has been reduced to approximately 300 cfm and the HEPA filter will have to be replaced to return the air flow to the optimum level.

Optional **Intake Manifold** can be used on the suction side of the unit providing 10” connection for flex duct. The discharge side of the unit also has 10” diameter ring for a flex hose.

Maintenance: The blower and motor do not require any maintenance when the machine is operated with the HEPA filter in place. When replacing the HEPA filter, the gasket side of the HEPA must face the blower unit. The HEPA filter is held in place by four metal tabs. Make sure that the HEPA filter is seated well against the internal flange. Tighten the filter tabs to compress the gasket evenly, **do not over tighten**.

Note: To reduce the starting current, start machine with SPEED CONTROLLER knob then select the desired speed.